

SAMSUNG

Printed in Korea GH68-50743A Rev.1.0 English (EU). 09/2019

Package contents

- Device Belt clip
- Battery (2 included) USB cable
- PTT headset USB power adaptor
- Charging dock Ouick start guide
- Battery case
- The items supplied with the device and their images may vary by region.

Accessing more information

Visit www.samsung.com to view device information, the user manual, and more.

You may incur additional charges for accessing the Internet

Device layout

To turn on the device, press and hold the Power key for a few seconds.




Ensure that the back cover is closed tightly to prevent water and dust from entering the device. Open or loose back cover may allow water and dust to enter the device and cause damage.


Installing a nano-SIM card and a battery

/!`

Nano-SIM card

- \square . Use only nano-SIM cards that support the Emergency Services Network (ESN).
 - Nano-SIM cards are sold separately.

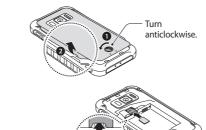

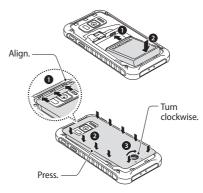

- Turn the screw with a coin or other objects to lock or unlock the back cover. Using your fingernails may cause damage.
- Do not bend or twist the back cover excessively. Doing so may damage the cover
 - Ensure that the back cover is closed tightly and then turn the screw clockwise to lock the back cover.
 - Use only Samsung-approved back covers and accessories with the device.

Charging the battery

The battery in your device should already be partially charged.

 
Use only USB Type-C cable supplied with the device. The device may be damaged if you use Micro USB cable.



The charger should remain close to the electric socket and easily accessible while charging.

Using the charger

If you charge the device while the multipurpose jack is wet, the device may be damaged. Thoroughly dry the multipurpose jack before charging the device.





Using the charging dock

Use the charging dock to charge the device and the spare battery.



If your device is frozen and unresponsive, press and hold the Power key and the Volume Down key simultaneously for more than 7 seconds to restart it.

 It is recommended not to use fixed graphics on part or all of the touchscreen for extended periods. Doing so may result in afterimages (screen burn-in) or ghosting.

o prevent possible hearing damage when using a headset, do not listen to sound at high volume for long periods.



Attaching the belt clip

Attach the belt clip to your device to connect it to the belt or other objects.







Detaching the belt clip

Pull the handle at the bottom of the belt clip and detach it from the device.



Correct disposal

Y This marking on the product, accessories or literature indicates that the product and its electronic accessories /-**o** (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

¥ This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste.

For information on Samsung's environmental commitments and product-specific regulatory obligations, e.g. REACH, WEEE, Batteries, visit samsung.com/uk/aboutsamsung/samsungelectronics/ corporatecitizenship/data corner.html

Safety information

Read all safety information before using the device to ensure safe and proper use. You can view more safety information in the safety information menu of the Settings app.



The charging dock contains magnets. The American Heart Association (US) and the Medicines and Healthcare Products Regulatory Agency (UK) both warn that magnets can affect the operation of implanted pacemakers, cardioverters, defibrillators, insulin pumps or other electro medical devices (collectively, "Medical Device") within the range of 15 cm (6 inches). If you are a user of any of these Medical Devices, DO NOT USE THE CHARGING DOCK UNLESS YOU HAVE CONSULTED WITH YOUR PHYSICIAN.

Follow the warnings below to prevent incidents, such as fires or explosions, injuries, or damage to the device

- Do not expose the device to physical impact or damage
- Use only Samsung-approved batteries, chargers, and cables specifically designed for your device.
- Prevent the multipurpose jack and battery terminals from coming into contact with foreign materials such as metal, liquids, or dust.
- If any part of the device, such as the glass or acrylic body, is broken, smokes, or emits a burning odor, stop using the device immediately. Use the device again only after it has been repaired at a Samsung Service Centre.
- · Do not turn on or use the device when the battery compartment is exposed.
- Do not disassemble or reuse the battery.
- Do not allow children or animals to chew or suck the device.
- The device can be used in locations with an ambient temperature of -20 °C to 55 °C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan.

- Do not use your device in a hot environment or near fire.
- Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle.

Maintaining water and dust resistance

The device may be damaged if water or dust enters the device. Follow these tips carefully to maintain the water- and dust-resistant performance of the device.

- Do not immerse the device in fresh water deeper than 1.5 m or keep it submerged for more than 30 minutes.
- Do not expose the device to water moving with force. Do not suddenly apply water pressure to the device, such as when diving.
- Do not open the device's covers when the device is in water or in very humid places, such as swimming pools or bathrooms.
- · Do not open the back cover using wet hands or when the device is wet.
- The rubber seal fitted to the back cover is an important component of the device. Take care when opening and closing the back cover to avoid damaging the rubber seal. Also, ensure that the rubber seal is free from debris, such as sand or dust to prevent damage to the device.
- The back and multipurpose jack covers may be loosened if the device is dropped or receives an impact. Ensure that all the covers are properly aligned and tightly closed.
- If the device is exposed to fresh water, dry it thoroughly with a clean. soft cloth. If the device is exposed to other liquids, such as salt water, swimming pool water, soapy water, oil, perfume, sunscreen, hand cleaner, or chemical products such as cosmetics, rinse it with fresh water and dry it thoroughly with a clean, soft cloth. If you do not follow these instructions, the device's performance and appearance may be affected.
- If the device has been immersed in water or the microphone or speaker is wet, sound may not be heard clearly during a call.

Declaration of Conformity

Samsung Electronics declares that this device complies with the essential requirements and relevant provisions of Directive 2014/53/EU. Go to www.samsung.com/mobile doc to view the Declaration of Conformity,

Some content may differ from your device depending on the software version, and is subject to change without prior notice. Copyright © 2019 Samsung Electronics

- Do not detach or remove the multipurpose jack cover from the device.
- Make sure to use the headset with the tube. Using without the tube may allow water and dust to enter the headset.

Your device has been tested in a controlled environment and certified to be water- and dust-resistant in specific situations (meets requirements of classification IP68 as described by the international standard IEC 60529-Degrees of Protection provided by Enclosures [IP Code]; test conditions: 15-35 °C, 86-106 kPa, fresh water, 1.5 metre, 30 minutes). Despite this classification, it is still possible for your device to be damaged in certain situations.

Specific Absorption Rate (SAR) certification information



Your mobile is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. The guidelines were developed by an independent scientific www.sar-tick.com organisation (ICNIRP) and include a substantial

safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known

as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg. The highest SAR values under the ICNIRP guidelines for this device model are:

SAR values for European countries: The SAR values below are only for devices developed for use in European countries.

Maximum SAR for this model and conditions under which it was recorded

Head SAR	1.369 W/kg
Body-worn SAR	0.804 W/kg

Body-worn SAR testing has been carried out at a separation distance of 0.5 cm. To meet RF exposure guidelines during body-worn operation, the device should be positioned at least this distance away from the body.

For SAR values for all other countries: For SAR values specific to your model, visit www.samsung.com/sar and search for your region and device with the model number.

Band and mode

Band and mode	Output power				
EGSM900	33 dBm				
DCS1800	30 dBm				
WCDMA 900/2100	24 dBm				
LTE 3/7/20	23 dBm				
Wi-Fi 2.4 GHz	20 dBm				
Bluetooth 2.4 GHz	20 dBm				
ANT+ 2.4 GHz	20 dBm				
Wi-Fi 5.1-5.7 GHz	23 dBm				
Wi-Fi 5.8 GHz	25 mW				
NFC 13.56 MHz	42 dBμA/m at 10 m				

The use of WLAN band is restricted to indoor use only. This restriction will be applied in all countries below.

	AT	BE	BG	CH	CY	CZ	DE	DK	EE	ES	EL
ſ	FI	FR	HR	HU	IE	IS	IT	LI	LT	LU	LV
	MT	NL	NO	PL	PT	RO	SE	SI	SK	TR	UK